



NOTES:

 DO NOT TWISTING HEAD RELATIVE TO BODY USE 8mm TOOL PROVIDED, (IF IT SHOULD TWIST PUSH DOWN HARD ON HEAD AT THE SAME TIME USE TOOL TO REALIGN/CENTRE.
WHILE THE ACTUATOR CAN TAKE LARGE AXIAL LOADS, SIDE LOADS SHOULD BE AVOIDED OTHERWISE ACTUATOR DAMAGE COULD OCCUR. IDEALLY THIS CAN BE DONE BY MOUNTING THE ACTUATOR USING HEMISPHERICAL ENDS ACCESSORIES (BEP5) SO THAT OFF AXIS LOADS ARE NOT TRANSMITTED.
HANDLED WITH CARE TO AVOID DAMAGE DO DON'T CRUSH OR KINK WIRE. CABLE MUST NOT BE BEND LESS THAN A RADIUS OF 28mm. 4. DO NOT LIFT ACTUATOR BY ITS CABLE. 5. DO NOT CLAMP ON ON HOUSING.

ECN	REV	CREATED	APP	DATE	DETAILS
	A	JC			